




# Kodak EasyShare C195 LCD Screen Replacement

Replacing the LCD Screen in your camera

Written By: Alyssa

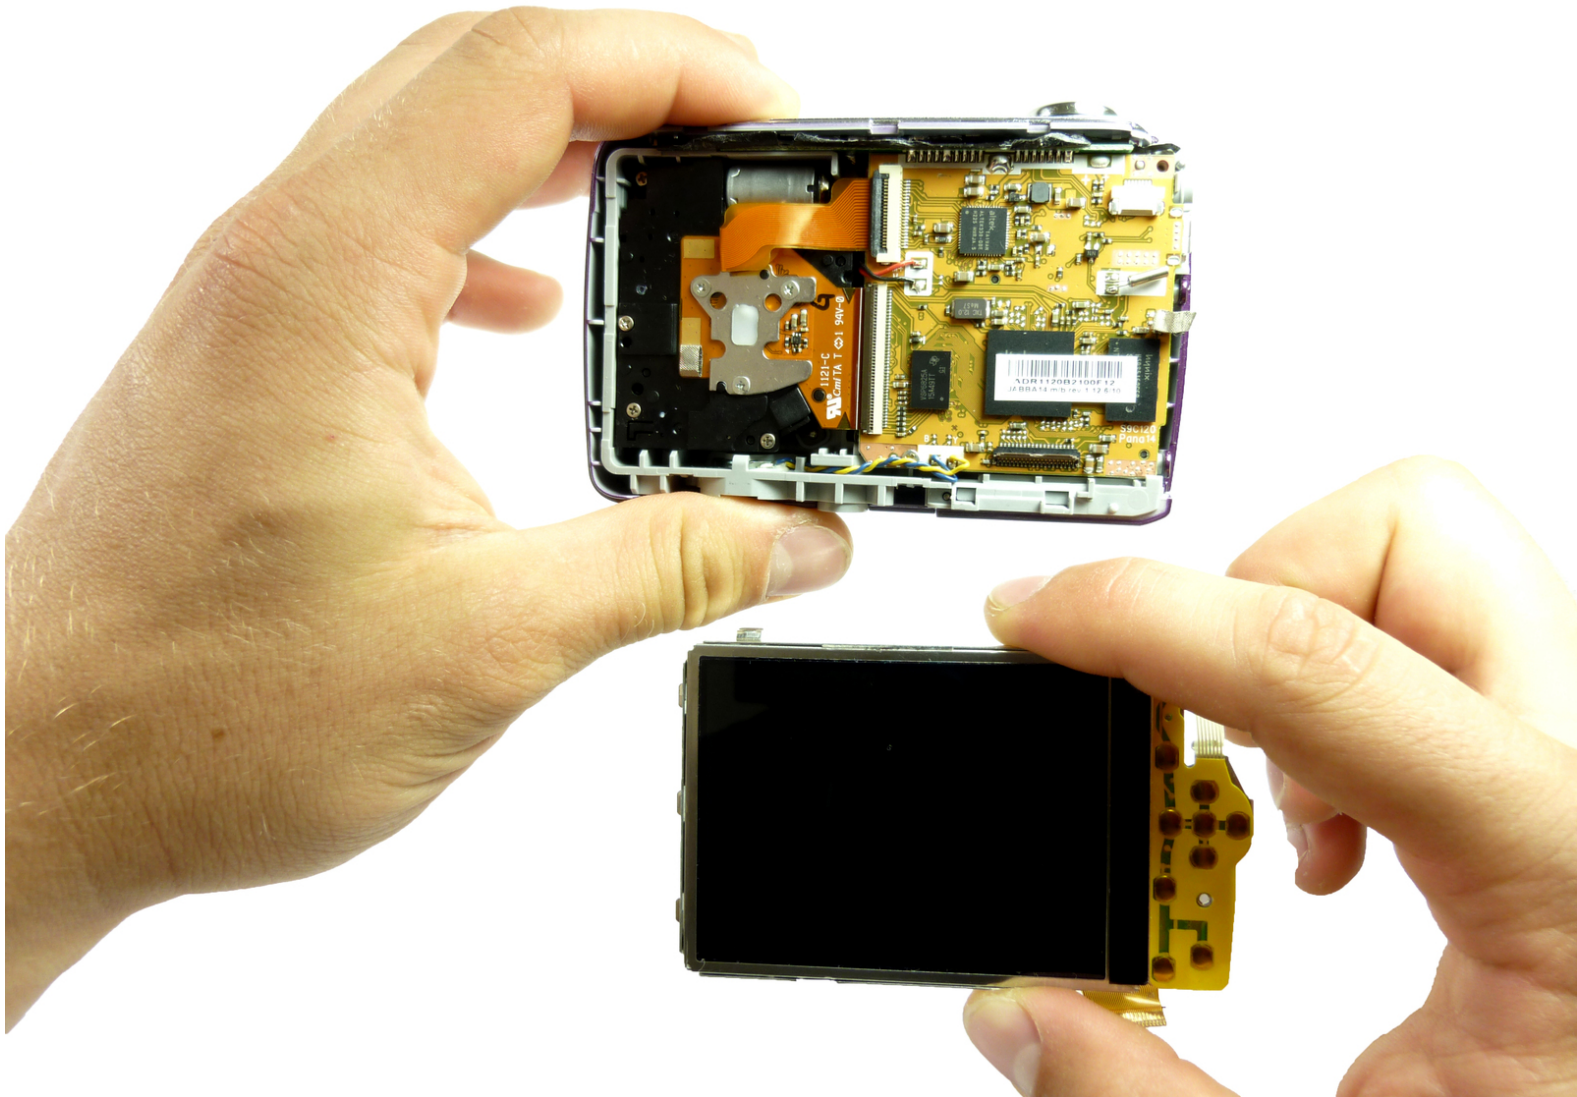

## INTRODUCTION

This guide will show you how to take out and replace the LCD screen on your camera.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — LCD Screen



- To start, remove the Philips #00 4.5 mm screws on both sides of the camera.
- On the bottom, there are three Philips #00 4.5 mm screws. Two are for the front panel and one is for the back panel. To remove the back panel, take out the screws indicated in the final picture of the sequence.

## Step 2




- Once all the screws are out, remove the back panel.

 The front panel does not need to be removed for replacing the LCD or the Lens.


- To do this, start by removing the bottom of the panel.

### Step 3

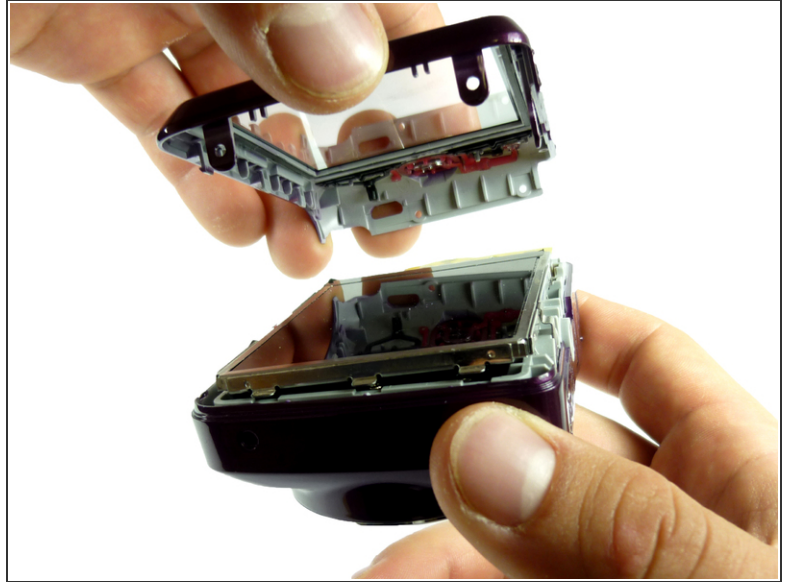

- Once the bottom part is unhooked, unhook the top, and the whole panel should come off.
- Be sure to gently pry the cover off.


### Step 4

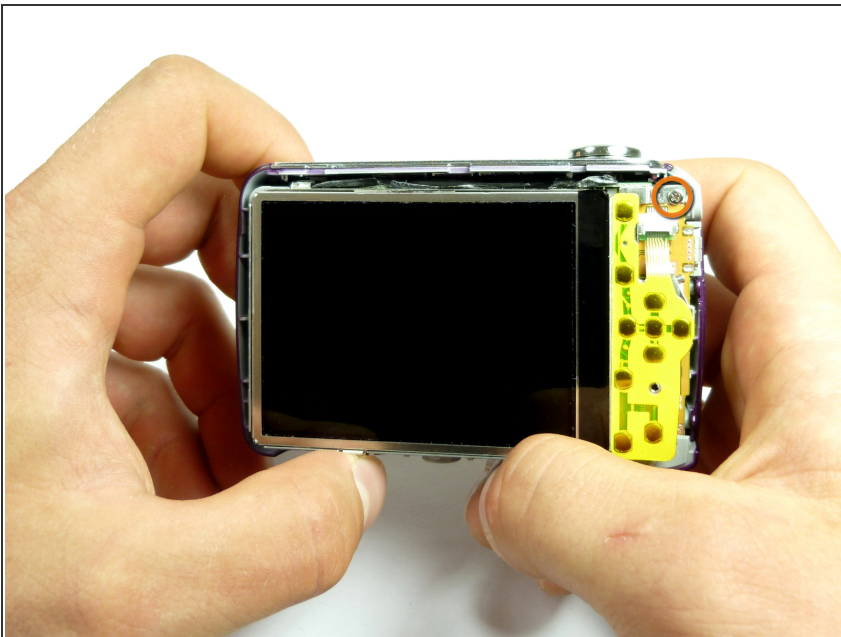

- In the top right hand corner of the inside of the camera, there is a Philips #00 4 mm screw that needs to be removed.



## Step 5

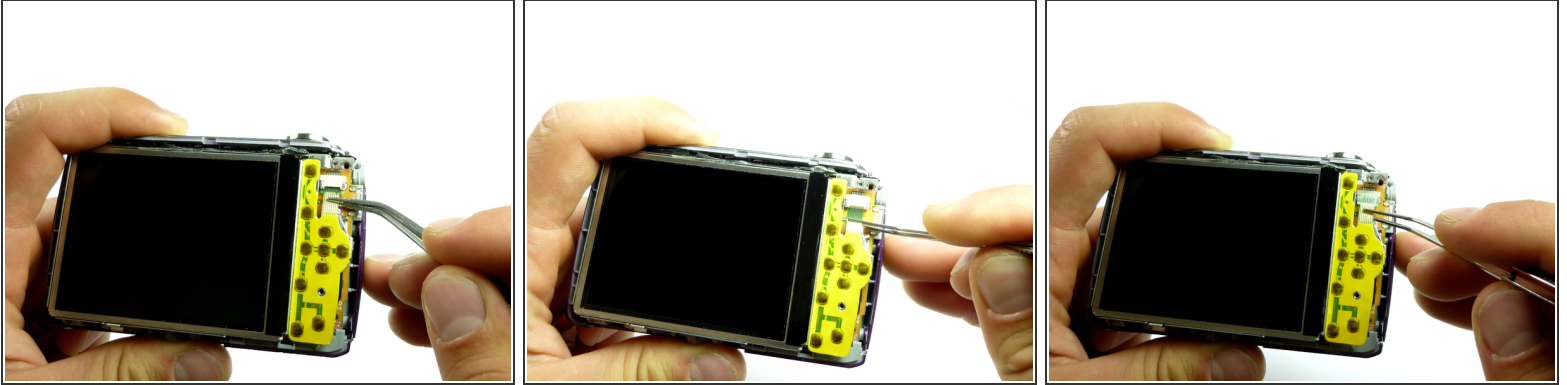

- The next step is to remove the white ribbon on the upper right hand corner next to the LCD screen.
- This can be done with or without tweezers.

⚠ The screen is still attached at the bottom, so do not take the screen off yet.

## Step 6



- Carefully pry the top portion of the screen from the camera.


⚠ The screen is still attached to the camera via a yellow ribbon at the bottom of the camera.

## Step 7



- To remove the screen completely, push down on the rectangular tab indicated in the picture.

## Step 8

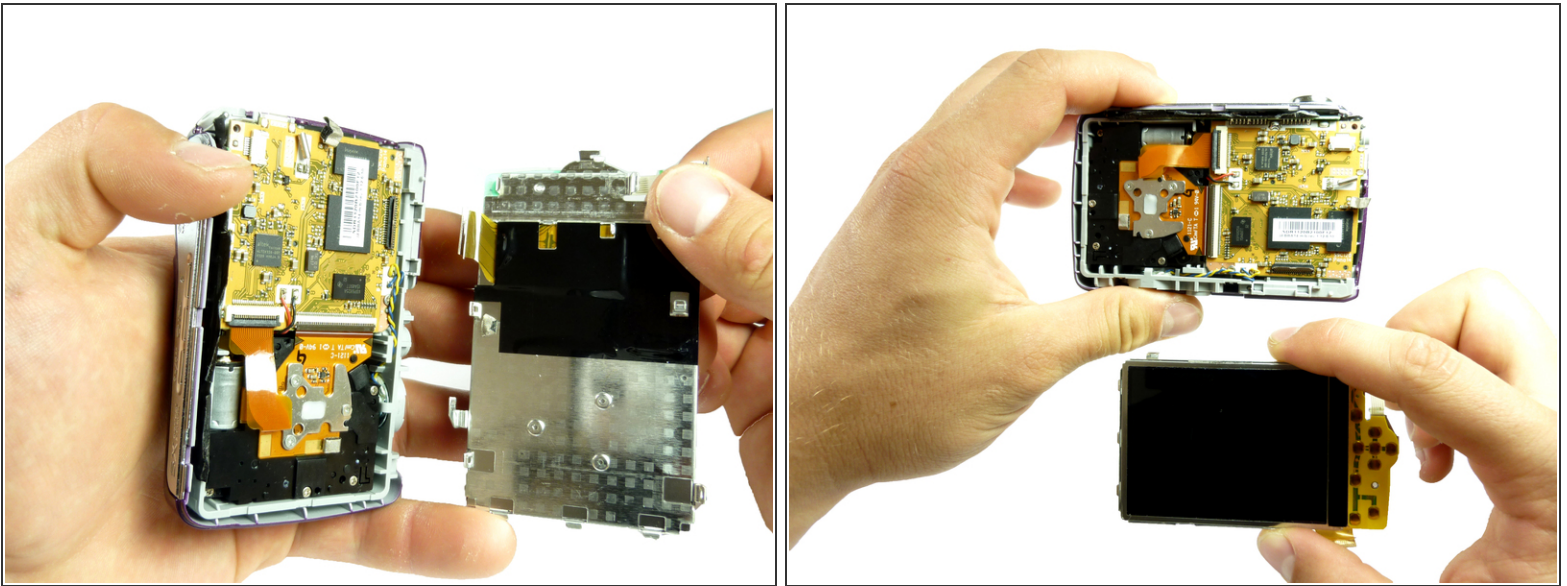

- The LCD screen is now completely removed from the rest of the camera.

To reassemble your device, follow these instructions in reverse order. NOTE: be sure to put the internal screws on the inside and the external screws on the outside.

This document was last generated on 2017-06-20 10:28:44 AM.